



## Security Considerations

### Warning

represents a potentially dangerous situation which, if not avoided, could result in death or serious injury.

To avoid the risk of fire, burn, damage, electric shock, breakage, overheating, odor or soot, please follow the following instructions.

- Please always use the specified voltage and AC adapter to avoid causing damage and failure.
- Do not overload the power cord.
- Do not place a weight on the AC power cord or plug, or damage the power cord or plug.
- Do not bend or pull the AC power cord. Always be careful to hold the AC adapter when disconnecting from the power socket.
- Make sure the plug is fully plugged into the power socket. Do not use loose sockets.
- Do not wet the GG-980 / AC adapter/power socket and battery.
- For example, do not touch with wet hands or spill liquid on these devices.
- If the battery leaks and comes into contact with eyes, please flush the eye immediately with plenty of water and seek medical attention. Battery leaks can cause damage to the eyes.
- Do not remove or modify the Printer / AC adapter and battery.
- Do not use metal objects to simultaneously contact the positive and negative levels of the battery.
- When replacing batteries, please do not use sharp or metallic objects, such as tweezers or metal pens.
- Do not throw the battery into the fire or into the high temperature.
- During use or storage, if you find any peculiar smell, heat, discoloration, deformation or any abnormal situation, you should immediately disconnect the AC adapter or take out the battery, and stop using the GG-980.
- Do not use damaged or leaky batteries as the liquid may stick to your hands.
- Do not use batteries that have been deformed or leaked or that have damaged battery labels. These batteries can get hot.

### Warning

To avoid the risk of fire, burn, damage, electric shock, breakage, overheating, odor or soot, please follow the following instructions.

- Keep the GG-980 out of reach of infants when not in use. Besides, do not allow infants to put GG-980 parts or labels into their mouths. If the kids swallow anything, seek medical attention immediately.
- After printing, please do not touch the metal parts near the print head.
- Do not touch the cutting blade.
- If battery leakage comes into contact with your skin or clothes, please rinse immediately with clean water.
- If you stop using the GG-980, please remove the battery and disconnect the AC adapter.
- Do not use batteries other than those specified. Do not mix old and new batteries, or mix batteries of different types, charging levels, manufacturers or models. When inserting the battery, please do not reverse the positive and negative poles.
- Do not drop or hit the GG-980 or AC adapter.
- Do not press the LCD screen.
- Please be careful not to jam your finger when closing the lid of the ribbon box.
- Please install the battery correctly to ensure the normal use of the machine.

## General considerations

- Labels may not be able to be stripped or removed due to location, materials and environmental conditions, and the color of the label may change or stain other objects. Please check environmental conditions and materials before applying labels.
- Do not use this printer in any way or for any other purpose other than this manual. Failure to do so may result in an accident or damage to the GG-980.
- This GG-980 can only be used with a G&G ribbon. Do not use ribbon without G&G mark.
- Please use only a soft, dry cloth to clean the GG-980. Do not use alcohol or other organic solvents.
- Clean the print head with a dry cotton swab. Do not touch the print head directly.
- A failure or repair of the GG-980, or a battery failure, can result in the storage of all data in memory.

- Do not pull the ribbon when printing or sending the ribbon. Doing so will damage the ribbon.
- The GG-980 is not configured for rechargeable batteries.
- The length of the printed label may differ from the length of the displayed label.
- During production and transportation, the display is covered with a protective transparent plastic sticker. Please peel off the sticker before use.

## Other precautions

### Instructions

- Operate the keyboard gently.
- Do not touch the print head.
- When cutting labels with scissors, be careful not to cut fingers.
- Do not use the label paste to the human body, biological property, common property, or others.

### About the printing of label

- Depending on the context in which the tag is used and the nature of the tag pasting object, the following problems may arise:
- Label: discoloration, character fading, peeling
- Surface: residue, stain, damage
- Please carefully check the suitability of the label for the intended purpose before use. The company is not responsible for any damage or loss caused by any of these factors.

 
### Ninestar Corporation

Add: No. 3883, Zhuhai Avenue, Xiangzhou District, Zhuhai Guangdong, P.R. China 519060  
Tel: +86-756-6258826  
Website: www.ggimage.com  
E-mail: Annie.du@ggimage.com

## before use

## Installation steps for power supply and label tapes before use


1

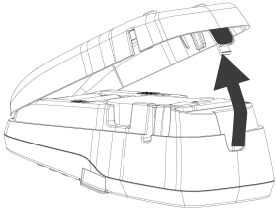

Press the open cover lock at the top of 0m and pull upward.

**Notes:** Please make sure the power is turned off when loading the battery or label tapes.


2

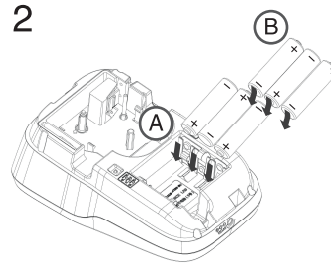

Load six new AA alkaline batteries (LR6: not included) or fully charged nickel metal hydride batteries (HR6: not included) to ensure that the polarity of these batteries is in the right direction.

- Alkaline battery users: please do not mix old and new batteries.
- Nickel-metal hydride battery user: always load into six fully charged batteries at the same time.
- A represents the lower battery of this layer; B means that this battery is the upper battery.


3

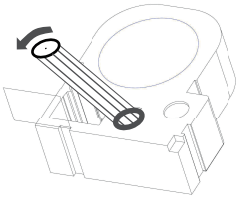

Retract the slack part of the label tapes

- Tighten the ribbon so that it does not break due to loose carbon.


4

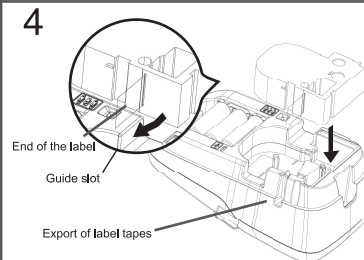

Insert the ribbon box and make sure it fits properly.

- Make sure the end of the label passes through the guide slot correctly.
- This Printer can only be used with G&G label tapes.

5

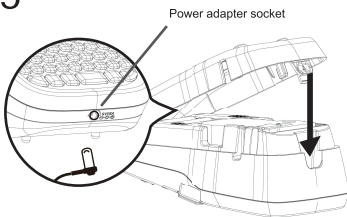

Close the lid of the ribbon to make sure it fits in place.

**Note**

When using AC adapter

- Connect the ac adapter to the ac adapter socket at the bottom of the GG-980.
- Plug into the nearest standard power outlet. For backup memory, it is recommended to use an AA alkaline battery (LR06) or a nickel metal hydride (HR06) with an AC adapter.

## Basic usage

### Startup & Shutdown

#### Power on

1. Press **Power** to select the desired text and click **Enter** to complete.


#### Shut down

1. Press **Power**.  
Long press for two seconds to turn off the machine.

### Edit text


#### Toggle case

1. Press **A/a**.

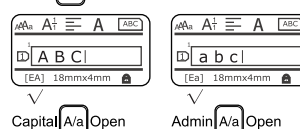


#### Switch Pinyin input

1. Press **EN/CH**.

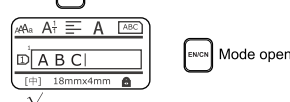

#### Input Text


1. Press **EN/CH** Switch to pinyin mode.  
For example: "Dian".

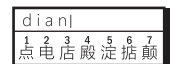

Press the numeric key **2** or move the direction key **2** to select the desired text and click **Enter** to complete.

#### Produce multiple lines of text


1. Enter the first line, then press **Enter**, then enter the second line, then press **Enter**, and enter the third line. In this way, you can print up to four lines.

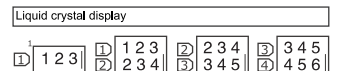

- It is recommended that print a maximum of 2 lines of text with width of 9MM.
- It is recommended that print a maximum of 4 lines of text with width of 12MM.
- It is recommended that print a maximum of 4 lines of text with width of 18MM.

#### Delete

 
1. Press **Backspace** can delete characters one by one.
2. Press **Clear** and then press **2** select delete.

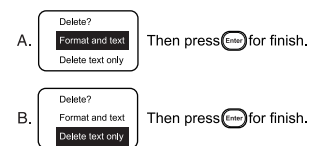

#### Change the length of label

1. Press **Template** then choose
 
## LCD screen and keyboards

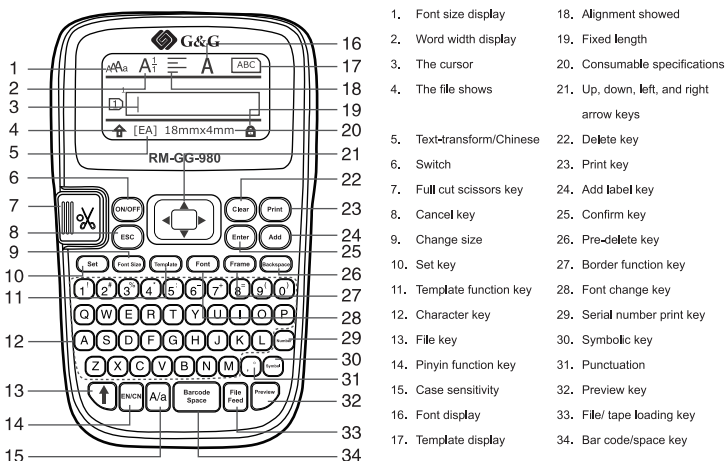

Edit text

Content	Cause/ Solution
The font size is too large	Press the (font size) function key to adjust to the appropriate font size
Surpass fixed length	If the input content exceeds the specified length, press (template) function to select the normal template and then adjust the length (press left and right arrow keys) and press (ok) key to confirm the setting
No data	No print contents entered
Please install the label	Please use label tape of G&G
The cutter is not right	Full cutting knife is not reset, after reset it will be alright
Low battery	Replace with a new battery
Missend	The ends of tag with a cutting edge, don't push in the process of tape cut all buttons
Print out the label text ends after gap is too big	Reference function, adjust the margin, is introduced from the feature set inside


 
For example: A **A** A A A A

1. Press , the second label content box will appear, and more than 50 label boxes

Input  
▶123◀  
[EA]

[illegible][illegible]

Category	Symbol
Office	
Animal	
Character	
Nature	

Tool										
Food										

The product name		Purchase date	
The machine number			
The user name		Phone number of user	
Address of the user			
Distributor name			
Phone number of distributor		The zip code	
Dealer seal (seal is valid)			

Add: No. 3883, Zhuhai Avenue, Xiangzhou District,  
Zhuhai Guangdong, P.R. China 519060  
Tel: +86-756-6258826  
Website: [www.ggimage.com](http://www.ggimage.com)  
E-mail: [Annie.du@ggimage.com](mailto:Annie.du@ggimage.com)