

Bluetooth connection method for GG-D1180CW



I . Install Elabel

It can be downloaded by scanning or searching for Elabel in Google Store or Apple's App Store.



II . Connect Bluetooth for printing

Power up the printer and put it in standby mode, Turn on phone 's Bluetooth.


Open the Elabel app on your phone, click "Unconnected" in the upper left corner to connect to the printer, and select Bluetooth.

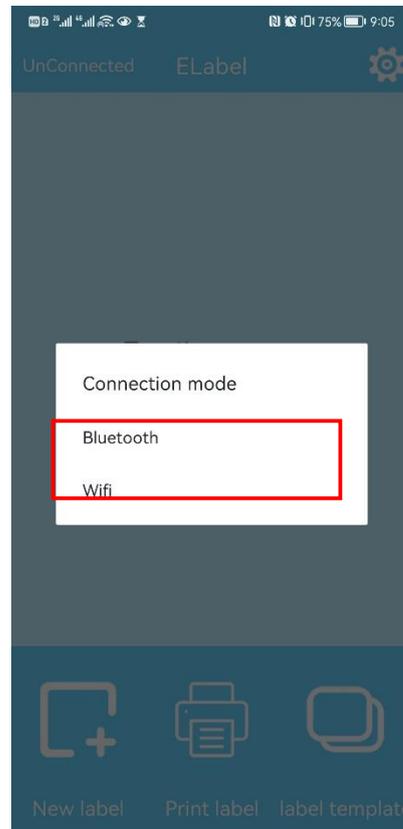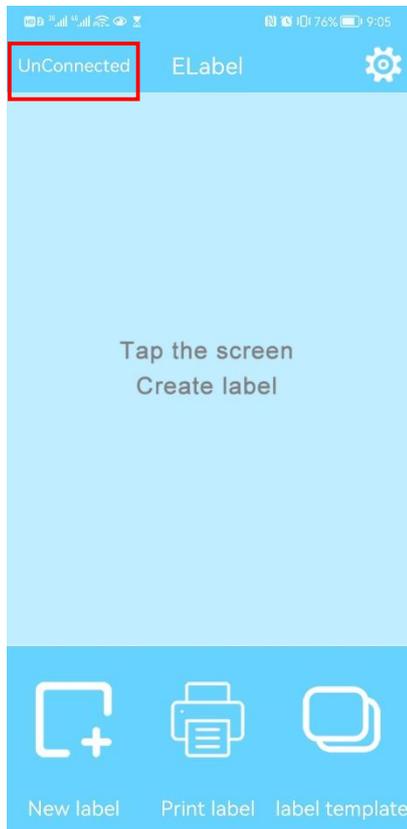


Click search device and select the name of the printer to be connected

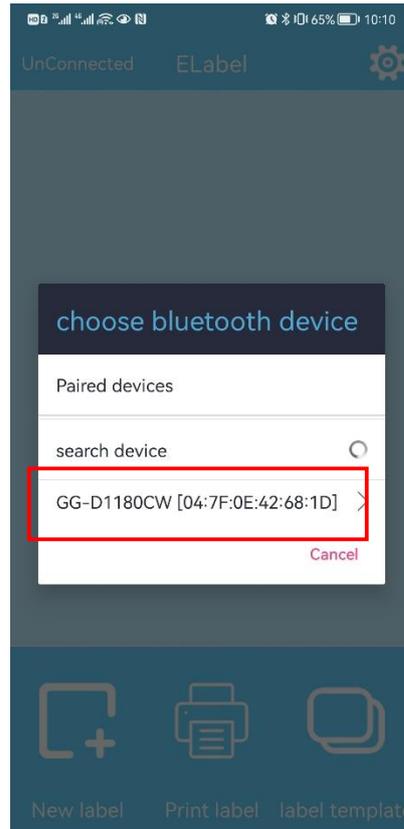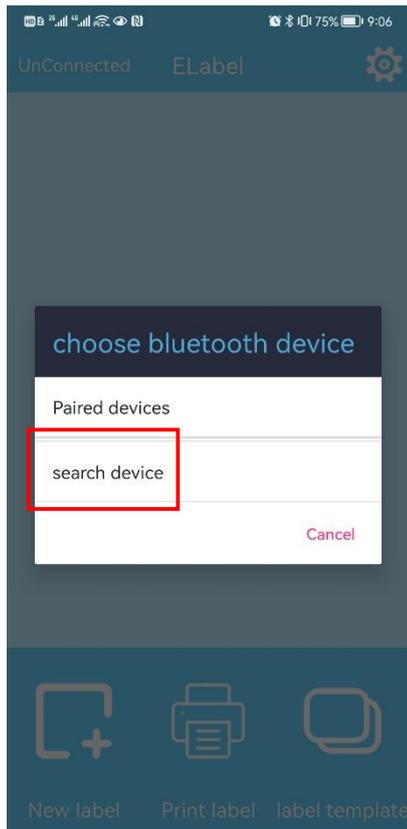


Enter PIN (It is usually 0000 or 1234) . Click OK. The connection is successful.

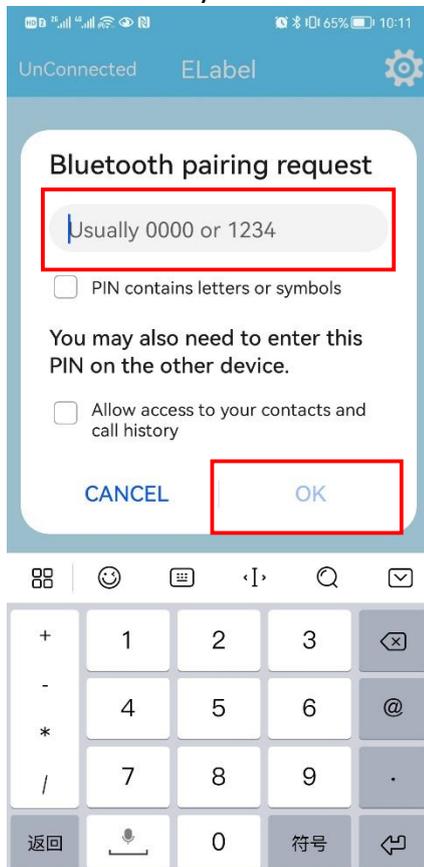

After the connection is successful, click New label.

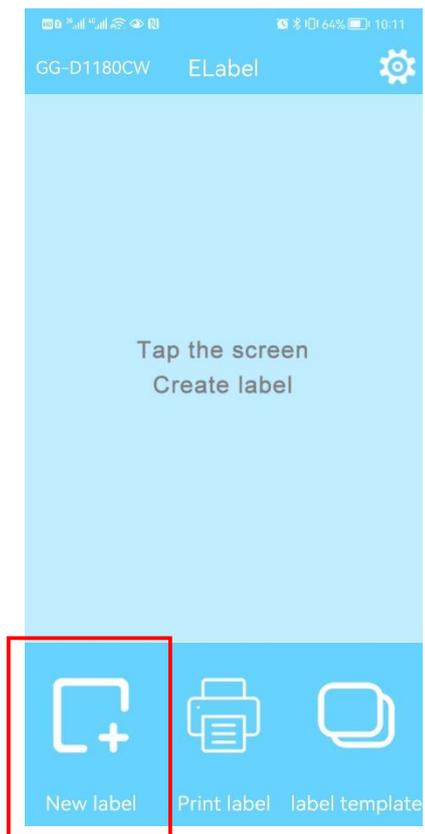

Change the label width and height to appropriate values. Click Determine.

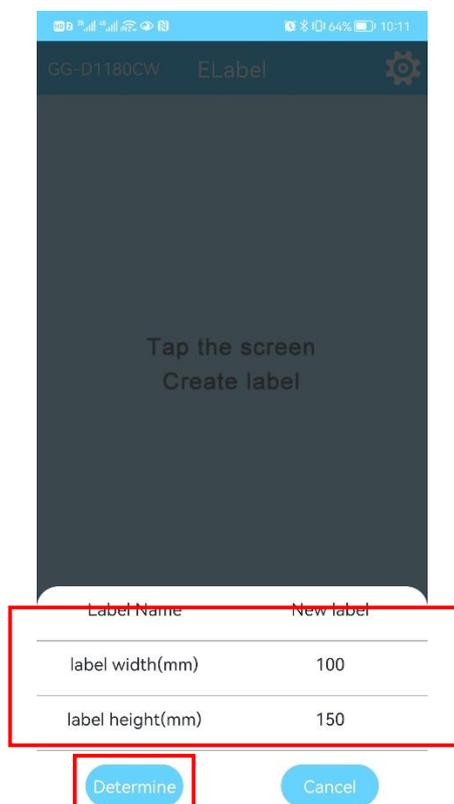

Edit the content to print and click on the print icon in the upper right corner



Enter the number of printed sheets and click OK , then it can be printed successfully.

